



555 Country Club Lane, Suite C-229, Escondido, CA 92026
(760) 214-5405 • Fax:(760) 746-5531
WBE#15060226

INSTALLATION INSTRUCTIONS

REMOVABLE POLE STEP – PART #1024

SAFETY WARNINGS:

- This equipment is to be used for the intended purpose of a removable utility pole step only. It is recommended for use on the lower section of poles (below 12' and is rated at 1750lbs. It is to be installed and used only by properly trained professionals.
- Prior to installation, visually check complete step assembly and pole for damage. Remove from service, destroy and discard unit if it does not pass this inspection and replace immediately.
- Verify that the structure (pole) mounting holes are compatibly sized with the pole step receiver/expansion bolt (1")
- **PRODUCT IS NOT TO BE USED FOR FALL PROTECTION OR RIGGING**

INSTALLATION INSTRUCTIONS:

- Insert the receiver assembly through opening in step bolt plate.
- Insert the receiver assembly (with the plate) through the opening in the pole wall. Make sure the welding points (on the back of the plate) are against the pole.
- Tighten the expansion bolt so that the step plate is snug against the pole wall.
- Using the step as a tool, insert one leg of the step into the left side of the plate step receiver. Hold the step plate vertical and continue tightening to the desired torque (approx. 70 ft./lbs.). Make sure that the top of the plate is level to ensure that the step will be level.
- Remove step from left side of plate and place in its proper position with both forks inserted into their proper sleeve openings.